

Instruction manual

Thank you for purchasing this Rokuhan product.
Please read this instruction manual carefully before operation, and operate properly.

1. Caution

- Turn off the power when the train derails. Turn-off the power and disconnect AC adapter or remove batteries if you see smoke or feel heat coming from this unit or trains.
- Use only Rokuhan AC adapter and Rokuhan products to operate this product.
- Do not use A010 AC cable to feed power.
- Disassembling and modification could cause failure of this product.
- Handle the cord with care to avoid disconnection or short circuit.
- To avoid short circuit, do not put any metallic product across the rails.
- This product includes sharp parts. Handle with care.
- Choking hazard. Keep out of reach of small children under 3 years old.
- Do not use product in a wet location to avoid shock or electrocution.
- To avoid shock or electrocution, do not operate this product in a wet location, or operate with wet hands.
- This product is not recommended for use by children under 8 years unless supervised by an adult.
- Do not leave this product running continuously for a long time.
- Do not screw too much when change location of the Rail blocks.
- Remove dirt and dust between table and gears of this product to avoid malfunction
- Do not turn turntable manually by hand.

2. Contents

