


## 5. Assembly and connection


### ● Tower assembly

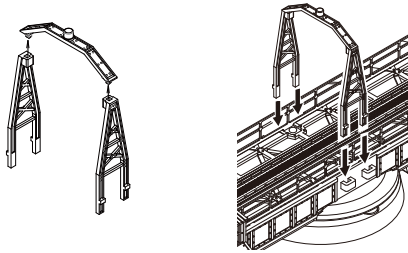

Take care not to damage this part which is delicate and easy to be bent.


The tower is assembled onto turning table (see left image). Do not glue so that it can be disassembled.

### ● Rail block assembly

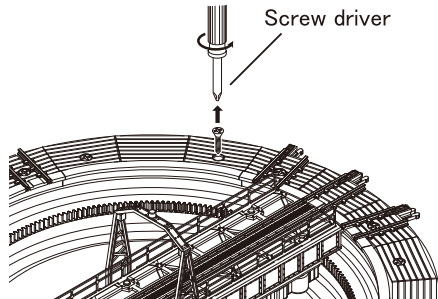


When tightening screw do not over tighten. (see left image).

### ● Wiring Here is standard wiring.

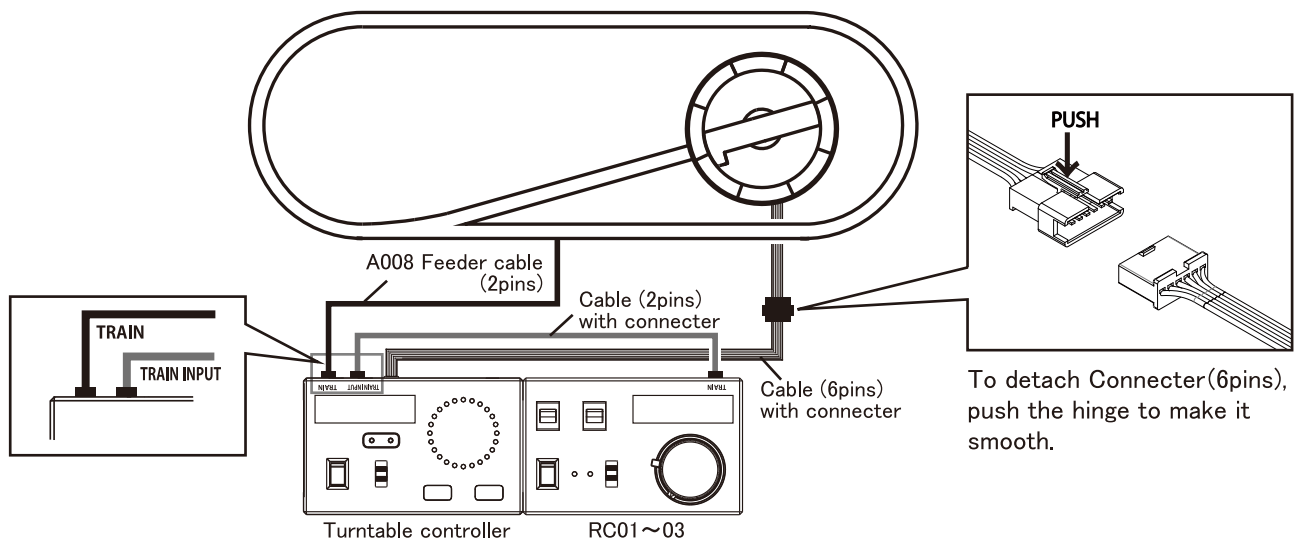

### ● Power source

Turntable controller has 2way power source. ① One is powered by AC adapter, and ② the other is powered by Rokuhan train controller through side hook.

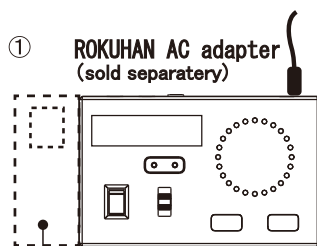


① ROKUHAN AC adapter (sold separately)

C002 Turnout switch,  
C004 Accessory switch, etc.

#### Turntable controller only

When Turntable controller is operated alone, Rokuhan AC adapter (sold separately) is necessary.

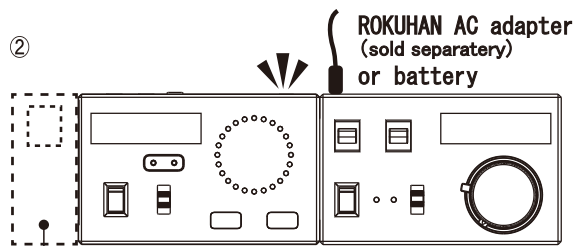

② ROKUHAN AC adapter (sold separately) or battery

C002 Turnout switch,  
C004 Accessory switch, etc.

#### Turntable controller + ROKUHAN train controller (RC01~RC03)

When Turntable controller and Rokuhan train controller are connected by side hook, DC power comes from Rokuhan train controller through the side hook. Thus, no need Rokuhan AC adapter for Turntable controller.

In both cases, additional accessory such as, C002 Turnout switch, C004 Accessory switch, etc. can be connected.