



6. Turning direction

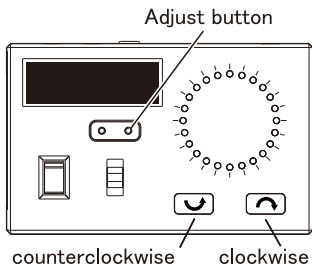

Push right hand button, then the table will turn clockwise.
Push left hand button, then the table will turn counterclockwise.
When push each button one time, it turns by 15 degree.
When push both buttons at a time, it turns clockwise by 180 degree.

Push the adjust button, left or right, then the table turns a little.
This button is used when there is deviation of tracks after normal function.


Position button

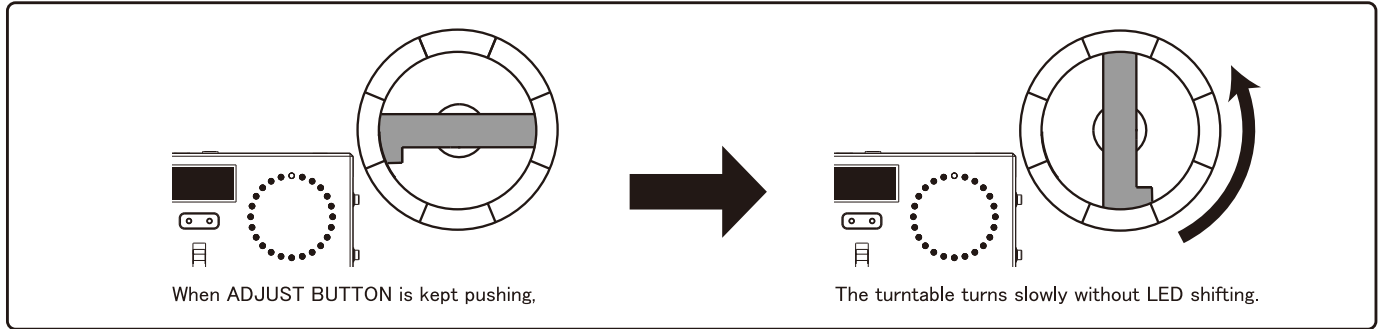

7. Gap joiner and Electrical mechanism


● Gap joiner

When Turntable is connected to the Layout main track, make sure to insert Gap joiner between Turn table and Layout main track.

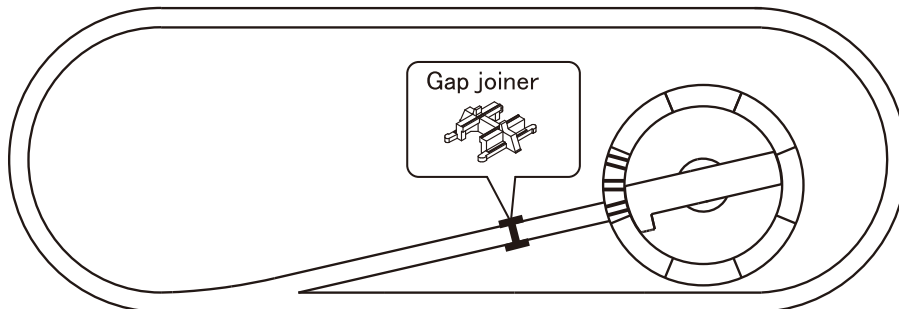

● Electrical mechanism

When the train comes into Turntable and turn 180 degree, the electric polarity of track becomes opposite between the Layout main track and Turntable track.

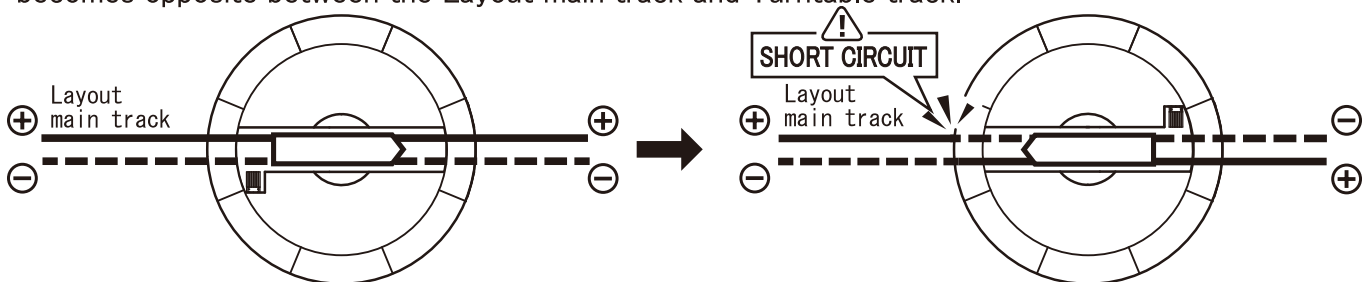

To avoid short circuit, gap joiner is necessary.

