


## 8. How to operate

### ● Setting

Figure 1

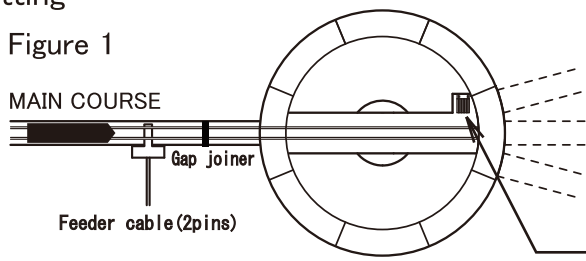



Please set Turntable and Layout main track as figure 1 shows. Insert direction of Feeder cable (A008 sold separately) and the location of Operating house are the keys in this case.

### ● Turn the car on the turntable



The train comes into Turntable when the direction switch of Turntable controller and Rokuhan train controller are same direction.

When the location of operating house is at opposite side to original setting (figure 1), the train will stop when it runs across the Gap joiner.



Then shift upper the direction switch on the Turntable controller.

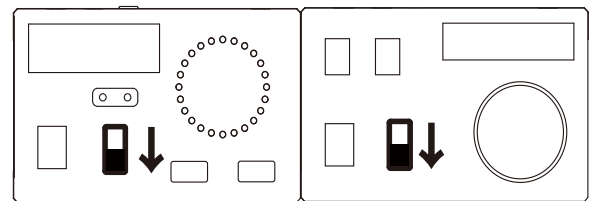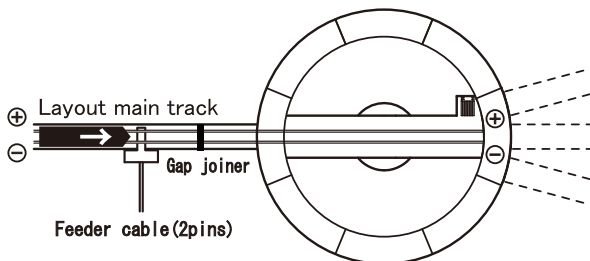

### ● Turn the table 180degree

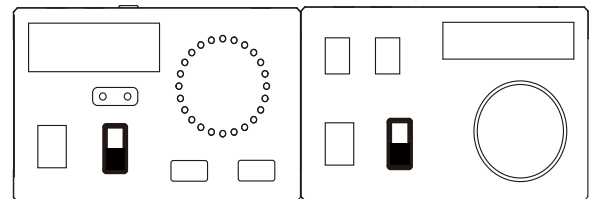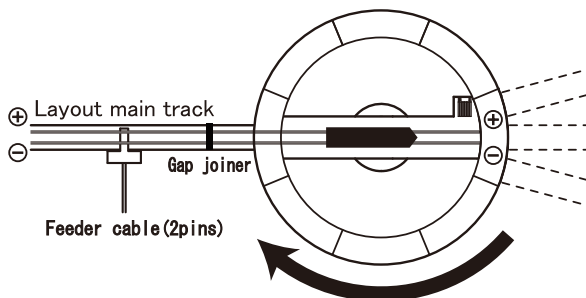

### ● When turning is over, shift direction switches opposite on both controllers. Then run the train out of Turntable.

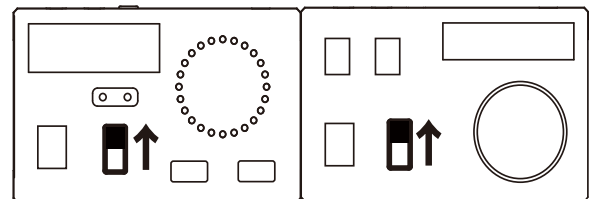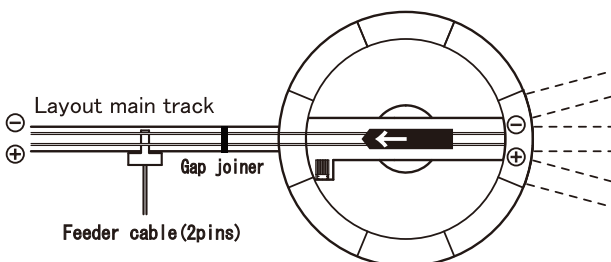

\* When feeding direction is opposite, switch location shall be also opposite.

## 9. How to place turntable in your diorama (layout)

The bottom of turntable body will sink down into your diorama (layout).

We recommend to build such hole on your board (see left image) in this case. Then there is no step between turntable and round house (S038) & others (sold separately).

