

Thank you for purchasing Rokuhan products. Please read carefully before use and use correctly.

CAUTION


- For best results, connect and disconnect the track on a flat surface. To avoid any damage of joiners and rails, do not twist the rails and do not use them with excessive force, and assemble/disassemble them with proper angle.
- Check your track is connected correctly before running your train. Each rail joint should be flush no bumps. If a rail joint is not flush, the train could derail and cause damage to your train and your track.
- Remove dirt from the rail with a rail cleaner before use. Dirty track is evident in jerky movement of your train and headlights that flicker. The power can not reach the engine if track and wheels are dirty.
- Do not store in a high-temperature/humidity area or away from source of heat. Also be careful with chemicals such as thinner to avoid deformation plastic.

1 Parts list


- | | | |
|------------------------------------|---------------------------------------|---|
| ① Straight track 110mm 2pcs | ⑤ Straight track 55mm 2pcs | ⑨ Screw (For non-power routing) 6pcs |
| ② Straight track 220mm 7pcs | ⑥ 53.6mm Trimmed track (L) 2pcs | ⑩ Instruction manual 1pc each
(Rail set F & Double slip turnout) |
| ③ Curved track R220-45° 8pcs | ⑦ Double slip turnout track 1pc | |
| ④ Curved track R490-13° 1pc | ⑧ Bumper track 2pcs | |

2 Guideline to assemble

① Assemble each track to follow the illustration.

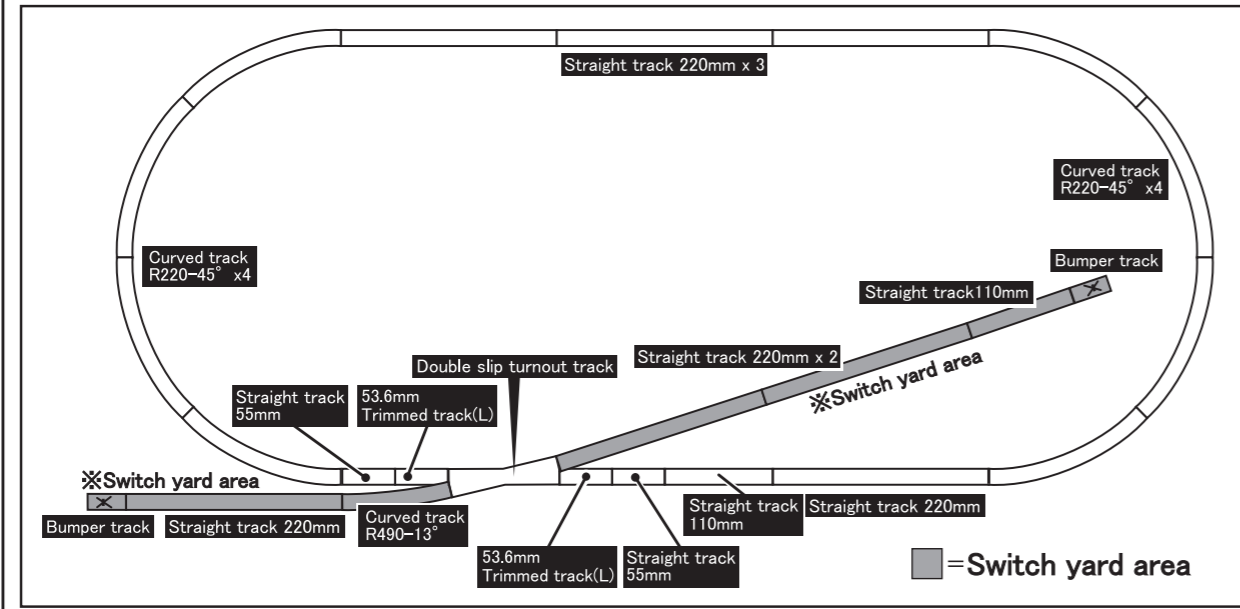

3 How to feed the power

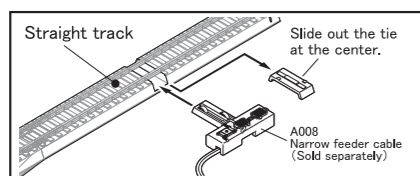


To feed the power from Rokuhan train controller, insert Narrow feeder cable at the center of straight track (55mm, 110mm & 220mm). To insert the male feeder of Narrow feeder cable, slide out the tie at the center of each straight track, then slide-in the male feeder completely.


4 How to feed power and play

There are mainly 2 ways to power and play with this rail set. One is to feed power by one train controller, which provides simple running. The other is to feed power by 3 train controllers which provides a little bit complicated running. To use 3 train controllers, some of A013 Gap Joiner (sold separately) are necessary.

① To use one train controller and its running direction

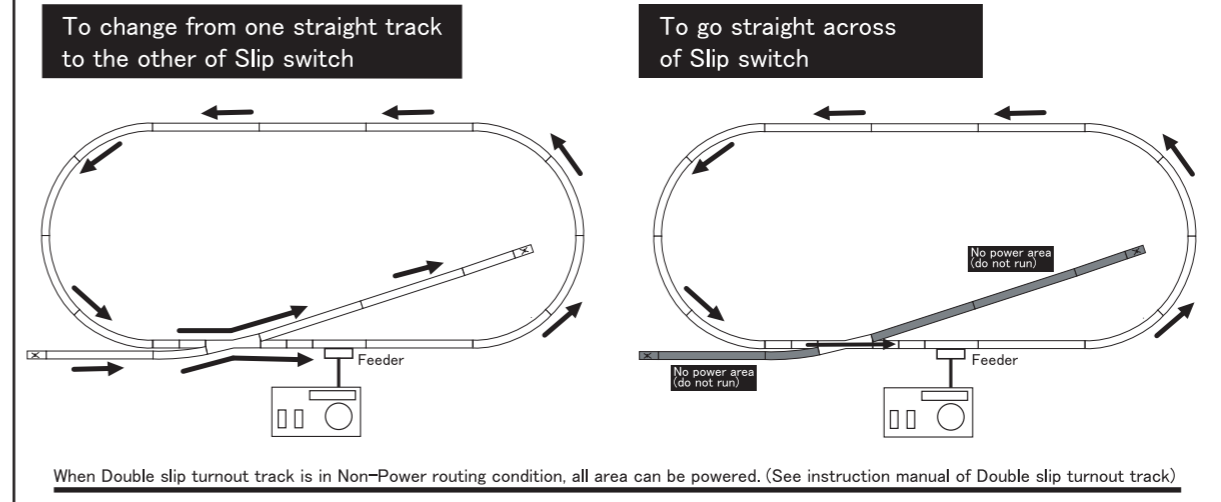

② To use 3 train controllers and its running direction

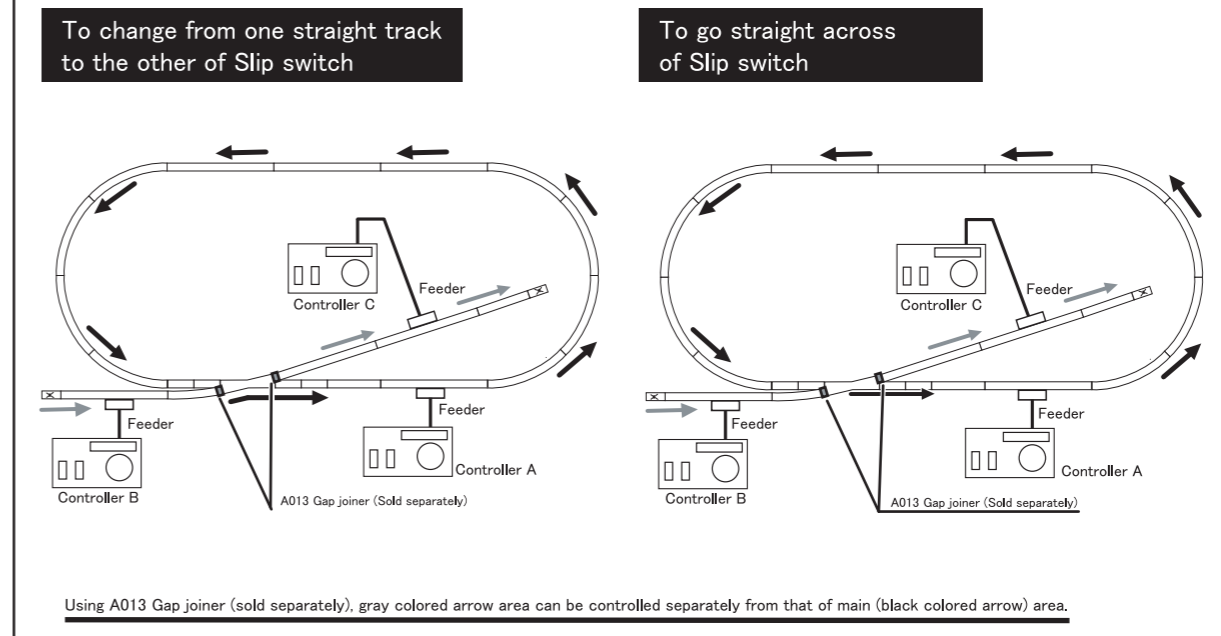

5 Trouble and repair

- The user is responsible for any trouble, accident, or injury caused by misuse, disassembling, or modification to this product. Rokuhan will not repair a product which has been opened, taken apart, or modified.
- Specification and appearance of our products are subject to change without prior notice.
- Contact Rokuhan customer service if you have any query.