

Thank you for purchasing Rokuhan product.
This is precision product. Please handle with care and read this manual carefully to operate this product correctly.

 
Warning

- Use this product for only railroad models, not use for other purpose.
- When a problem (abnormal over heating, smoking, odor, etc.) occurs at this layout or the car, turn the power off and unplug the power cord immediately. Continuing to use with a fault could lead to failure.
- Do not store the product in an area exposed to moisture, dust, high heat, or water.
- Do not disassemble or alter this product.
- Do not put any metal objects on the tracks as it can be dangerous due to short circuit.
- Follow this instruction manual to play and change battery.

Caution

- Do not hit, drop or through away this product.
- Pay attention to any sharp part or point to avoid injury.
- Keep away this product from moisture, dust, high heat or water.
- Do not play this product on a carpet or in a poor ventilated place.
- Clean track (Metal rails) before operation.
- This product is not recommended for use by children under 8 years old unless supervised by an adult, unless supervised by an adult.
- Check minimum radius size to run of each car and formation before play.
- Do not operate continuously over a long period of time.
- Do not suddenly change train direction. Stop train first then change direction.
- In the case of derailment or short circuit, turn off the power of controller, unplug the controller, and then eliminate the cause of problem.
- Do not keep under direct sunlight or room light for long time to avoid paint discoloration.
- Handle any tools with care to avoid injury.

1. Contents detail




[Pre-assembled tracks on the base]

- ※ Straight Track Without Track Bed L55mm ... 2 pcs.
- ※ Curved Track Without Track Bed R45-180° ... 2 pcs.

- ① Base 1pc
- ② KJHAS2-Metropolitan Color loco with powered chassis ... 1pc
- ③ Z shorthy loco label ... 1pc
- ④ Evergreen Tree 1pc
- ⑤ Instruction manual 1pc

2. How to set up back board and accessory

- Please make a fold at line (A) and set the background panel into the slit (B) as Fig.

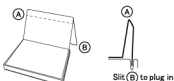

- The tree is inserted into the 1.5 to 2.0mm drilled hole on the base. After inserting, apply elastic glue at the rear side to fix it. Do not place the tree where there is battery box, wire and switch at rear side.




3. How to Play


Firstly confirm the direction switch is at OFF position. Then set Alkaline AA battery (sold separately) × 2 into the battery box at rear side. Pay attention to ⊕ and ⊖ direction then.

- Pay attention all the metal wheels are placed on the metal rail correctly as the Fig. shows.
- ※ Please use SA005 Z shorthy realier (sold separately) to place the car easier.


○ Correct setting

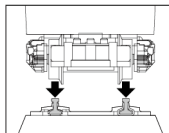


✗ Incorrect setting

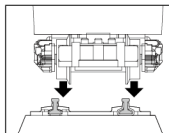

- Shift the direction switch to FWD or REV from OFF position after the car is loaded correctly.

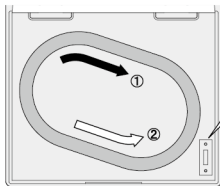

※ Check the condition of metal wheel and metal rail if there is any unstable run.

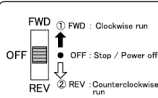

4. About running the train

In that case, run the vehicle at medium to high speed using the straight rail and controller straight rail, and then place it on the rail of this product to run smoothly.

If you do not have a straight rail and controller, wipe off the dirt on the rail of this product with a commercially available rail cleaner before running.

5. Trouble and repair

- The user is responsible for any trouble, accident, or injury caused by misuse, disassembling, or modification of this product. Rokuhan will not repair a product which has been opened, taken apart, or modified.
- Specification and appearance of our products are subject to change without prior notice.
- We sell assembled product only.
- Contact Rokuhan customer service if you have any questions about this product.