

EF66 Electric Locomotive Common instruction manual for all EF66 series

 
* Nipper for plastic, drill bit or pin vice are required to release and assemble accessory parts.

Thank you for purchasing this Rokuhan product. This product is precise. Please read this instruction manual carefully before operation and operate properly.

- Use only a Rokuhan controller to operate this product.
- Clean track (Metal rails) before operation.
- Remove dirt and dust on wheels.
- Do not operate continuously over a long period of time.
- Do not suddenly change train direction.
 Stop train first then change direction.
- In the case of derailment or short circuit turn off the power of controller
- unplug the controller, and then eliminate the cause of problem.

 Disassembling and modification could cause failure of this product.
- Storing this product in direct sunlight or fluorescent light for long time could cause change in color.
- Store and operate this product in dry dust free locations, away from sources of heat.
- To avoid shock or electrocution, do not operate this product in a wet. location or operate with wet hands
- This product includes sharp parts. Handle with care.
- Handle tools with care.
- This product is not recommended for use by children under 8 years old unless supervised by an adult,

2. Parts list




- 2 Runner part A
 1pc.

 1. Radio antenna
 3pcs.(1pc. is a spare)
- 2. Whistle part set bar*******
 1pc.

 3. Whistle part ******
 4pcs.(2pcs. are spares)
- 4 Runner part C (Included with T008-3, T008-4 only) *** 1pc.
- ⑤ Air conditioner (Included with T008-3, T008-4 only) · · · 2pcs.
- Instruction manual 1 pc.

3. How to set pantograph height

 
Please use tinner stick or similar tool, (see Figure 1)



4. How to set the accessory parts


4-1 Set Whistle part

Take off whistle part and whistle part set bar from runnner, set whistle part into bar. Push in whistle part softly into the body. (See Figure 2)

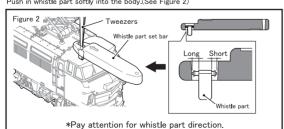


4-2 Set another accessory parts

 - Required hi skill for this process, please proceed carefully.
- Use Dia I.0mm dril or similar tool to make small holes on the body.
 Please pay attention to handle care of sharp tool and plastick parts.
 You can choice radio anntena, GPS, Air—con part as you like to make
- different spec of engine.
- 1 Take off power unit from bodymove back lighting unit and pull up from body (See Figure 3)



2 Make neccessory hole by drill from body inside and set accessory parts according to instruction. (See Figure 4) * Don't hold pantograph tightly prevent from easy broken.

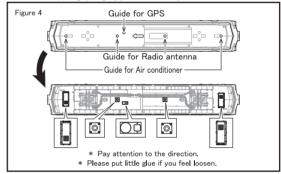


③Re-set lighting unit in reverse process. (Pay attention power unit durection)

5. How to exchange Coupler

Arnold coupler (short) in default, Can exchange to another ROKUHAN snap in coupler set.

■A019 Knuckle coupler(short) ■A021 European coupler(short) ■A025 Arnold coupler(long) ■A020 Knuckle coupler(long) ■A022 European coupler(long)

 Pull out original coupler softly from body. Push in another coupler. (See Figure 5)



6. Maintenance

- If EF66 does not run, check feeder cable and power are plugged in correctly, the positions of main switch and direction switch on controller. Also check batteries are set correctly in controller if batteries are used as power. The wheels and track may be dirty if EF66 does not run smoothly. Romove the dirt on the wheels and track with a clean cloth and rail cleaner.
 * Do not put excessive power on the wheels when you clean it.
- Precise parts are used to make EF66. Please pay attention not to damage, drop or put excessive pressure. Handle it with care. If it is broken, be careful not to be injured by the broken piece or not to accedentally swallow it.

7. Trouble and repair

- The user is responsible for any trouble, accident, or injury caused by misuse, disassembling
 or modification to this product. Rokuhan will not repair a product which has been opened,
 taken apart, or modified.
- taken apart, or modified. Specification and appearance of our products are subject to change without prior notice Contact Rokuhan customer service if you have any query.

RIKUHAN 7-27, NUMAWADA, TOCHIGI-CITY, 328-0042, JAPAN. TEL: 81-282-20-2365
TOYTEC CORPORATION URL: http://www.rokuhan.com/english/