ROKUHAN KIHA52-100 Trailer car

Common instruction manual


* Nippers for plastic are required to release accessory parts.

Thank you for purchasing this Rokuhan product. This product is a fine scale model. Handle with care to avoid damage. Please read this instruction manual carefully before operation and operate properly.

1. Caution

- Use only a Rokuhan controller to operate this product.
- Clean track (metal rails) before operation.
- Remove dirt and dust on wheels.
- Disassembling and modification could cause failure of this product.
- Storing this product in direct sunlight or fluorescent light for long periods of time could cause change in color.
- Store and operate this product in dry dust free locations, away from sources of excessive heat.
- This product includes sharp parts. Handle with care.
- Handle tools with care.
- This product is not recommended for use by children under 8 years old unless supervised by an adult.

2. Parts list

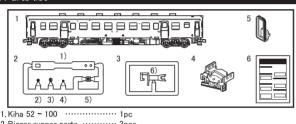


- 2. Bigger runner parts 3pcs
- 1) Tool to assist in operating switch ··· 3pcs
 2) Air horn A ····· 3pcs
 3) Air horn B ····· 3pcs

- 4) Signal flare ····· 3pcs 5) Antenna for train radio····· 3pcs
- 3. Smaller runner parts 2pcs 6) Arnold coupler (Rapido coupler) · · · · 2cps
- 4. Snowplow for double track · · · 2pcs
- 5 Diaphragm ····· 2pcs
- 6 Instruction manual 1nc

3. How to assemble the accessory parts

3-1. Assemble the air horns and the signal flares


Cut off the horns and the signal flares with nippers and assemble it according to the figure 1. Choose air horn A or B The opposite end can be done by same

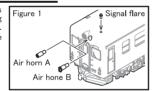

3-2. Replace the couplers

Dummy couplers are set as default. Change the couplers to connect more trains according to the figure 2.


- 1. Put your fingers on the spots shown by arrows and fix Kiha 52–100 between your fingers. Pull out the coupler horizontally.
- 2. Cut off the Arnold couplers (Repido couplers) with nippers. Insert it horizontally into Kiha 52-100.
- * Use Arnold couplers (Repido couplers) to connect Kiha 52–100 to each other.
- * Be careful with the direction of couplers.

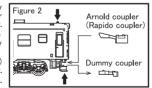


3-3. Install the diaphragm

Separate the body and chassis as the figure 3 and install the diaphragm.


The arrows on the body and the chassis show which the heads are. Assemble the body and the chassis again according to the arrows.

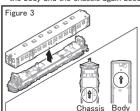

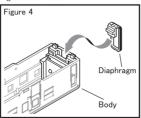

3-4. Change the snowplow


Separate the body and chassis according to the figure 3 under "3-3. Install the diaphragm". Change the snowplow for single track to the snowplow for double

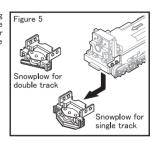

3-5. Turn off the lights

Separate the body and chassis according to the figure 3 under "3–3. Install the diaphragm". The head light and tail light are turned on and off by moving the switch as shown in the figure 6. "The rom light" (sold separately) can be also turned on and off by the tool to assist in operating switch.


* The lights are on as default.

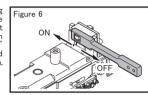


3-6. Assemble the antenna for train radio (for the experienced modelers only)

The mounting operation as shown below is for the experienced modelers who understand model trains well. Handle the tools with care when you use it. The structure of the product should be appropriately understood and carefully worked. This operation requires Dia. 1mm drill bit, pin vice, and tweezers.

This product simulates Kiha 52-100 under JNR, thus does not have a hole for the antenna for train radio. Install the antenna according to the following instructions.

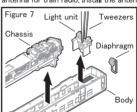


1. Remove chassis, diaphragm, and light unit from the body as the figure 7. The light unit may be damaged if it is removed vertically. Remove it according to the arrow

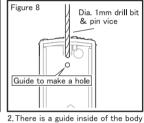


to make a hole. Use Dia.1mm drill bit and pin vice and make a hole.

Do not damage the signal flare which is already assembled.

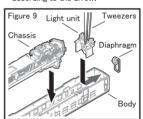

3. Assemble all parts again with the opposite procedure of figure 7. Do not forget to reassemble the light unit.

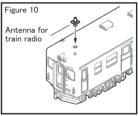

4. Cut off the antenna for train radio and install it into the hole you made. If it is too loose, use glue sparingly.

A015 Room light type B can be installed in this product. Read the instruction manual for A015 Room light type B for more details.

The wheels and track may be dirty if the head light of Kiha52-100 blinks. Remove the dirt on the wheels and track with a clean cloth and rail cleaner

* Do not put excessive pressure on the wheels when you clean them.

5. Trouble and repair

- The user is responsible for any trouble, accident, or injury caused by misuse, disassembling, or modification to this product. Rokuhan will not repair a product which has been opened, taken apart, or modified.
- Specification and appearance of our products are subject to change without prior notice.
- Contact Rokuhan customer service if you have any query.

常 ROKUHAN

7-27, NUMAWADA, TOCHIGI-CITY, 328-0042, JAPAN.

TEL: 81-282-20-2365 URL: http://www.rokuhan.com/english/ TOYTEC CORPORATION