Tobu 500 Type Revaty Common Instruction Manual

Thank you for purchasing this Rokuhan product.

This product is precise. Please read this instruction manual carefully before operation and operate properly.

1. Caution

- Use Rokuhan controller only to operate this product.
- Clean track (metal rails) before operation.
- Remove dirt and dust on wheels.
- Do not operate continuously over a long period of time. Do not suddenly change train direction. Stop train first then change direction.
- In the case of derailment or short circuit, turn off the power of controller, unplug the controller, and then eliminate the cause of problem.
- Disassembling and modification could cause failure of this product.
- Storing this product in direct sunlight or fluorescent light for long time could cause change in color.
- Store and operate this product in dry dust free locations, away from sources of heat.
- To avoid shock or electrocution, do not operate this product in a wet location or operate with wet hands.
- This product includes sharp parts. Handle with care. Handle tools with care
- This product is not recommended for use by children under 8 years old unless supervised by an adult.
- Please make sure to wrap the cars with Poly bag to avoid any damages when you pack the cars into blister package.



2. Contents of product



3. Caution to handle small parts

3-1 Train radio antenna and roof box installation

From the runner parts cut off the train radio antenna and the roof box with a nipper. Please pay attention to the orientation of parts as shown in Figure 1. Figure 1 Roof Box Radio antenna * If it is too loose, please fix with a small amount of adhesive etc.

3-2 How to handle pantograph

• Moha 501-1, Moha 501-3, Moha 502-1, Moha 502-3, Moha 503-1, Moha 503-3 are equipped with pantograph 1. Pull-up top part softly by stick until stop.



4. Lead car connection

When connecting the lead cars, please attach the connecting skirt part to each car to be connected according to the figure below.



(5) Please attach and install Bellows 6 Insert the penetrating door parts through the door hole in the into the hole of Through hole door part, feeling the body. convex upwards and downwards of parts.

| 5. Formation | |
|--|--|
| Revaty will run in 3 and The figure below is an e | |
| Asakusa | |
| Moha 502–1 | |
| | |
| 6. Accessories (Sol | |
| 6–1 Room light | |

Applicable model · All cars A009 · · · Saha 501-2 • Saha 502-2 • Saha 503-2

6-2 DCC Decoder Room light

Applicable model · All cars attached to the product. A059 DCC Decoder R

| 7 | . Trouble shooting |
|---|--|
| | Check followings befo |
| | Problem |
| | A train does not ru smoothly, and light flicker. |
| | Trains do not run. |
| | |
| | |
| 8 | . Trouble and repa |
| | |



L半 JAPAN // TOYTEC CORPORATION

⑦ By connecting the leading 2 cars, you can enjoy the 6-car formation U (Caracteria) Moha 500-1 type or 500-3 type Moha 500-1 type or 500-3 type

| ò car trains. Please enjoy it as you like. ample of composition. | | | | | |
|---|--|--|--|--|--|
| Aizu Tajima M Motor car Saha 502-2 Moha 502-3 | Tobu Nikko · Kinugawa <u>Onsen</u> Moha 501-1 <u>M Motor car</u> Saha 501-2 Moha 501-3 | | | | |
| Aizu set | Kegon set | | | | |
| | | | | | |

ld separately)

- This product can be equipped with [A030 Room light shinkansen (lead car)] or [A009 Room light type A]. For details, please refer to the attached instruction manual for each.
- A030 · · · Moha 501-1 Moha 501-3 Moha 502-1 Moha 502-3 Moha 503-1 Moha 503-3

This product can be equipped with [A059 DCC Decoder Room light multi type] that can be mounted on various cars by cutting a part of the product. For details, please refer to the instruction manual

| A059 DCC Decoder Room light type C mode · · | · Moha 501-1 • Moha 501-3 • Moha 502-1 • Moha 502-3 |
|--|---|
| | Moha 503-1 • Moha 503-3 |
| A059 DCC Decoder Room light type A mode \cdots | · Saha 501–2 • Saha 502–2 • Saha 503–2 |

ore ordering repair

| 0 1 | | |
|----------|--------------------------|---|
| | Cause | Correction |
| in Is | There is dirt on rails. | Remove the dirt with cleaner and cloth. |
| | There is dirt on wheels. | Remove the dirt with cleaner and cloth. |
| | A train derails. | Set the train properly on track using rerailer. |

- The user is responsible for any trouble, accident, or injury caused by misuse, disassembling, or modification of this product. Rokuhan will not repair a product which has been opened,
- Specification and appearance of our products are subject to change without prior notice.
- Contact Rokuhan customer service if you have any questions about this product.



7-27, NUMAWADA, TOCHIGI-CITY, 328-0042, JAPAN. TEL : 81-282-20-2365 URL : http://www.rokuhan.com/english/