# ② RDKUHAN G009-1 DE10 JRF Shunting Locomotive Uncouple STARTER SET Instruction Manual

Thank you for purchasing this Rokuhan product.

This product is a precision train model. Please read this instruction manual carefully before operation.

🖌 click 🔪





Please carefully read the car instruction manual included with this product and install the parts.



## 6 Let's put the car on the tracks!

①Place the relayer on the 110 mm straight track, as shown in the figure below.



2 Place the car in the recesses of the relayer and place it on the track, sliding it slowly with your fingertips.









After loading, check that all wheels are on the tracks correctly.

### 7 Let's make a run!

With the help of a relayer, set all the cars on the layout.



the state of the s

Adding optional tracks (sold separately) and a point-switching switch further expands the playability. As shown in the figure below, adding rails allows you to separate DE10 and KOKI106 in the yard.



### Secret technique! 9

R013 Bumper Track×1set

KOKI 106 can be equipped with various containers (sold separately) from Rokuhan. Load your favorite container and enjoy.

R022 Point rail Left branch×1set C002 point turnout switch×1pc



### 10 Let's clean!

Before and after running the car, apply model railroad cleaner to a cotton swab or a fine cloth. Let it soak in and clean tracks and car wheels. If cleaning is not performed regularly, it may cause malfunction.



#### Troubleshooting 11

Check the following information before requesting repair or service.

Problem	Cause	Correction
A train does not run smoothly.	Tracks might be dirty.	Apply a small amount of commercially available rail cleaner to a cloth to remove dust and dirt from the tracks.
	The wheels might be dirty.	Apply a small amount of commercial rail cleaner to a cloth to remove dust and dirt from the wheels.
A train does not work.	The car might be derailed (especially the motor car)	Use the rerailer to place the car on the tracks properly.

#### **Trouble and repair** 12

•We are not responsible for any accident, injury, or failure caused by incorrect usage, handling, modification, or disassembly. In addition, we cannot accept repairs for products that have been modified or disassembled by users. Product specification and appearance are subject to change without prior notice. Available only completed products, not sold part by part. Please contact Rokuhan customer service, if you have any questions about this

product.



**ROKUHAN** 7–27, NUMAWADA, TOCHIGI-CITY, 328–0042, JAPAN. TEL: 81–282–20–2365 URL: http://www.rokuhan.com/ Opening hour: 10:00 - 12:00, 13:00 - 17:00 TOYTEC CORPORATION (except Saturday, Sunday, and holidays)