


Thank you for purchasing this Rokuhan product.
This product is precision product. Please read this instruction manual carefully before operation and operate properly.


1. Caution

- Store this product in dry dust free locations, away from sources of excessive heat.
- This product includes sharp parts. Handle with care.
- Be careful to avoid injury when using tools.
- This product is not recommended for use by children under 15 years old unless supervised by an adult.

2. Parts list

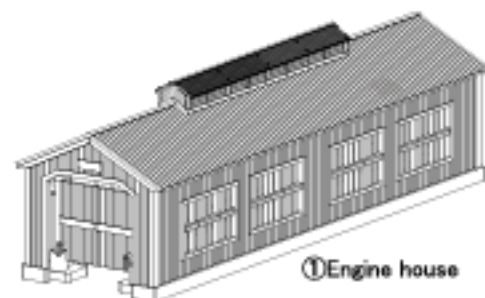


3. Dimension

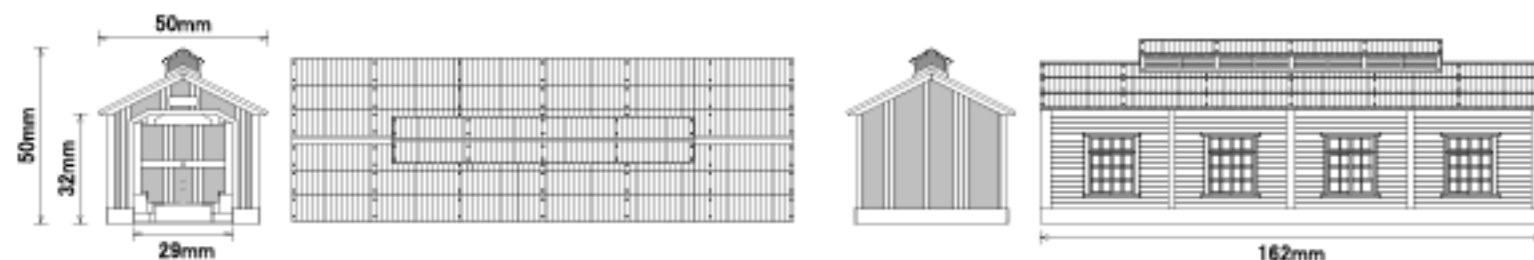

4. How to place engine house

Slide tracks under the engine house.

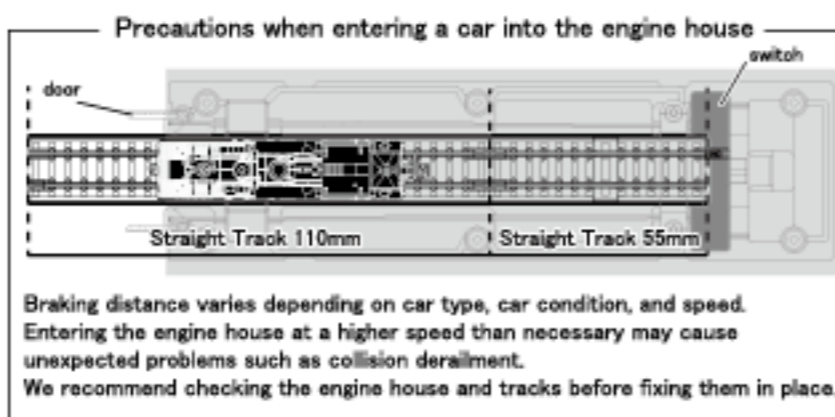


5. Opening and closing doors

The engine house doors are open when the cars are not inside (unloaded).
Once the car is inside (entered) and the switch at the back is pressed,
the door closes when the switch in the back is pushed.
Conversely, when the car is about to leave (exit),
the switch is deactivated and the door opens.

When the car is outside the engine house
(Condition before entry)




When the car is in the engine house
(a switch is pressed)

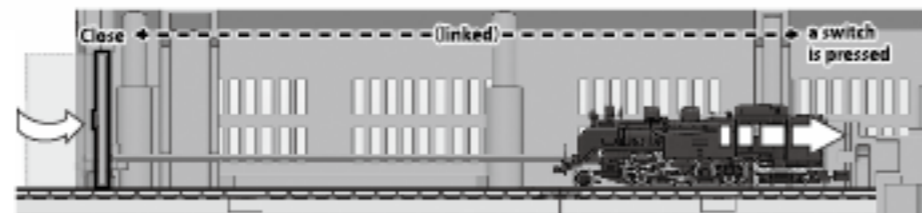

*The doors will not close properly if the car is light,
such as a Z Shorty car. Please understand this in
advance.

6. How to assemble LED unit (A017-1.2)


Use LED unit (A017-1.2) to light up inside engine house.
* If the LEDs are easily detached, fix them with tape or other means.

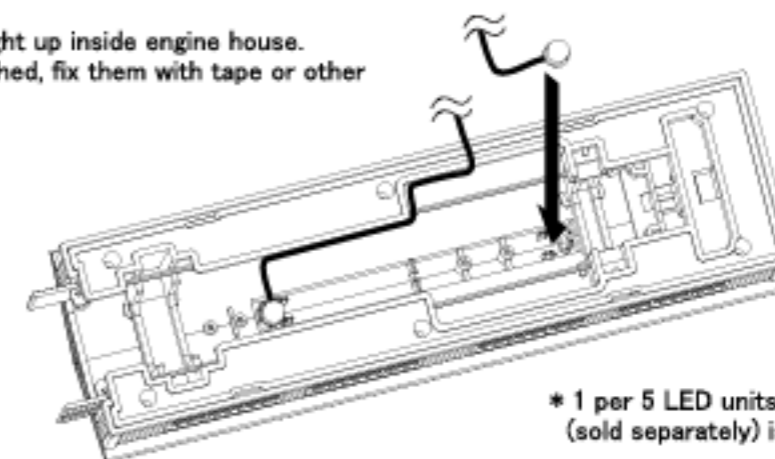

* 1 per 5 LED units A016 Accessory Terminal
(sold separately) is required for each 5 LED units.

7. How to stick label


Attach the label using the diagram below as a guide.
Carefully cut off the label using a sharp cutter or similar tool.
When using tools such as cutters, be careful
not to injure yourself.

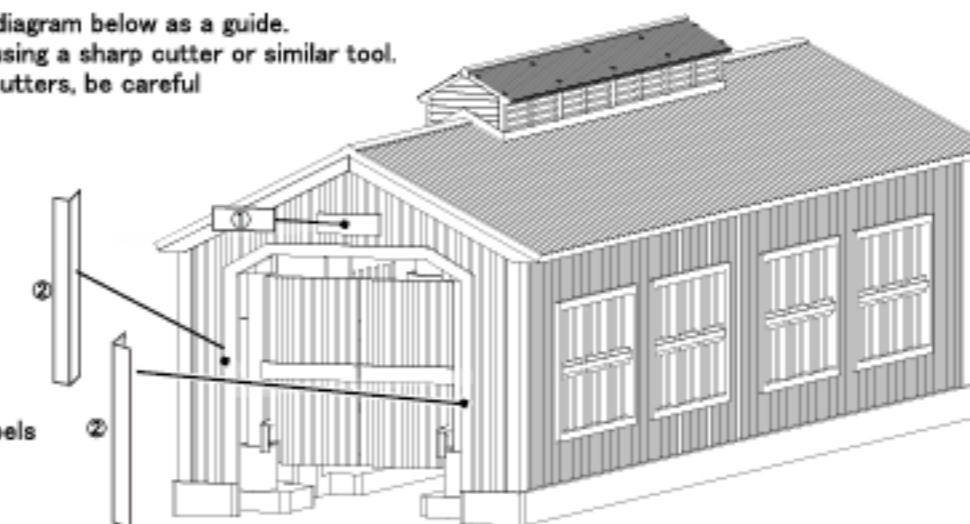

* Feel free to use other labels
as you wish.

When combined with the C006 Switch Back Controller (sold separately), the car can automatically enter and exit the engine house.

<Combination example>

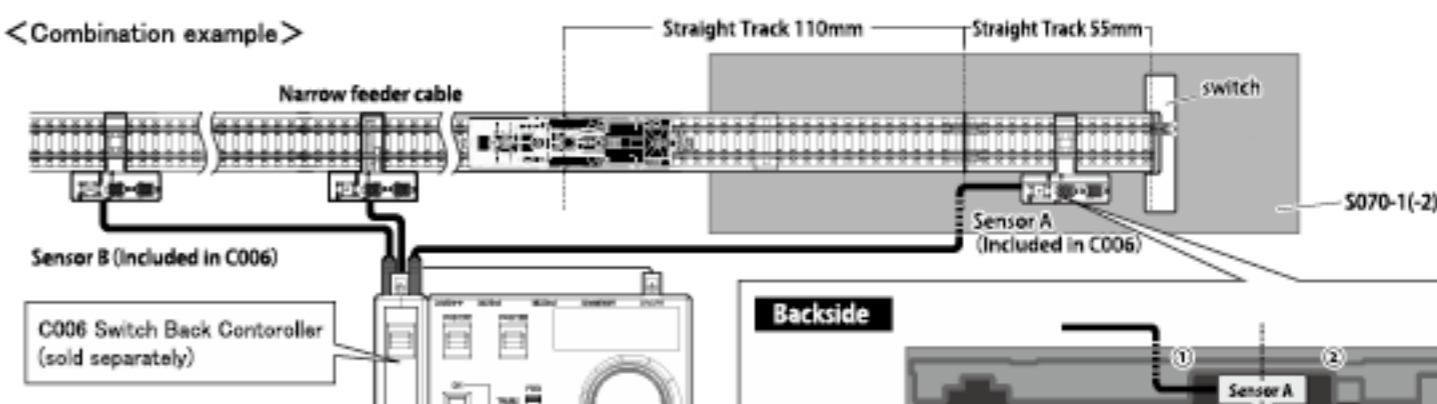

- * When using a sensor, drill a hole in the layout base, etc.
and pass the cable through the hole.
- * Adjust the speed gradually so that the switch is pressed
before the polarity is reversed by the passage of sensor
A, the door closes once, and then opens again to move
the car in the direction of sensor B.

8. Trouble and repair

- The user is responsible for any trouble, accident, or injury caused by misuse, disassembling, or modification to this product.
Rokuhan will not repair a product which has been opened, taken apart, or modified.
- Specification and appearance of our products are subject to change without prior notice.
- Contact Rokuhan customer service if you have any query.