

 
## T039-2 T039-3 EF58 Electric Locomotive Common Instruction manual

\* Side outters, modeling knife, tweezers and pin vise (drill bit) are NOT included with this product. 3. How to set pantograph height Thank you for nurchasing this Rokuban product

#### Please read this instruction manual carefully before you operate. 1 Caution


# This is a precision train model, so please handle carefully. Use only a Rokuhan controller to operate this product. Clean track surface (Metal rails) before operation

- Remove dirt and dust on wheels Do NOT operate continuously over a long period of time. ■ Do NOT suddenly change train direction. Stop train first then change direction In the case of derailment or short circuit, power off controller
- switch, unplug the AC adapter, and then eliminate the cause Disassembling and modification could cause failure of this.
- Storing this product in direct sunlight or fluorescent light for
- a long time could cause change in color Store and operate this product in dust free locations away
- from sources of heat and moisture. To avoid shock or electrocution, do not operate this product. in a wet location or operate with wet hands.
- This product includes sharp edge parts. Handle with care. Handle tools with care
- This product is NOT recommended for use by children under 15 years old unless superviserd by an adult.



# 4. How to install the accessory parts

 4-1 How to install Lightning rod and horn Please set Lightning rod and horn in place (See Figure 2)



Cut off parts from runner and install them correctly. \* If loose, apply a small amount of glue from the inside of the body to

#### 2. Parts List







(T) I inhitains and A and Dur 2 nes #150 and 127 use I A15 type

@ Radio anterna ··· 3 pos



B Type not for T039-2 and T039-3



(E) Instruction manual ut no

## 4-2 How to install Radio antenna

The parts process to be done from now on is for advanced users who understand the model. OWnen processing, please handle the tools carefully to avoid injury, and work carefully after completely understanding the structure of this product. \* When installing a Radio antenna, it is necessary to drill a hole with

a diameter of 1mm.

fix it in place.

We have not drilled any holes to install radio antennas to allow you to reproduce your preferred train type When installing please refer to Figure 3

 
\*The actual 127 does not have a radio antenna.

Remove the chassis while widening the edge of the body. and remove the light unit carefully with tweezers. (\* Be careful not to damage the headlight parts.)



2Drill a hole with a diameter of 1mm along the guide hole inside the body

For 150, the radio antenna will be installed inside the car body (near the headlight)




(3) Assemble the body in the reverse order of step (1).

### 5. How to install and remove the front wheel bogey

 You can pull out the leading wheel bogev by referring to Figure 5. Reassemble the main body in the reverse procedure. Re careful of parts coming off




If the part comes off, bend it 90 degrees and push it in from above to return it to its original position, referring to Figure 6. Please pay attention NOT to lost the spring.



### 6. How to install Dummy coupler

This product is installed with EF58-specific Arnold couplers: dummy couplers can be added if desired

 \* Due to the mounting structure, couplers (sold separately) not dedicated to this product cannot be used.



- If this product does not work, make sure feeder cable and nower are plugged in a place properly then the positions of main switch and direction selecter on controller should be chacked. Also please make sure batteries for controller are set in place if using without AC adapter
- The metal wheels and tracks may be dirty if this product does not run smoothly. Please remove the dirt on the metal wheels and tracks with a clean cloth and rail cleaner \* Do NOT put excessive power on the wheels when cleaning
- This product is precision model. Please pay attention. To avoid damaging engine, do, drop or put excessive pressure, on it. Handle it with care.

#### 8. Trouble and repair

- Any trouble, accident, or injury caused by misuse, disassem bling and modification of this product are not responsibility of Rokuhan, And Rokuhan does NOT accept repair requests of
- any products which have been disassembling or modifiided. Product specification and appearance are subject to change without prior notice
- Available only as completed product.
- Contact Rokuhan customer service if you have any questions about this product.



7-27 NUMAWADA TOCHIGI-CITY 229-0042 IADAN TOYTEC CORPORATION URL: http://www.rokuhan.com/