 


Thank you for purchasing this Rokuhan product. This product is precision product. Please read this instruction manual carefully before operation and operate properly.



Caution

- For best results, connect and disconnect the track on a flat surface. To avoid damage to rail joiners and rail, DO NOT twist or use excessive force at large angles when assembling your track.
- Check your track is connected correctly before running your train. Each rail joint should be flush no humps. If a rail is not flush, the train could derail and could cause damage to your train or track.
- Handle the cord with care to avoid breaking or short circuit.
- Remove dirt from the rail with a rail cleaner before use. Dirty track is evident in jerky movement of your train and headlights that flicker. The power cannot reach the engine if track and wheels are dirty.
- DO NOT store in a high-temperature/humidity area or away from source of heat. Also be careful with chemicals such as thinner to avoid deformation.
- This product is not recommended for use by children under 15 years old unless supervised by an adult.

1 Parts list




2 Guideline to assemble the layout

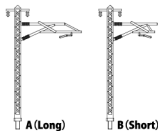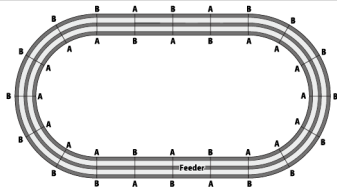


Separate the overhead mast from the runner, and install A and B in the positions as shown in the left figure.

3 Guideline to assemble tracks and parts


3-1 Guideline to assemble pier

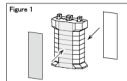

 The piers will come off easily if you use them as they are, so please attach the available "Pier label" before use.




 Referring to Figure 2, fit the pier bumps into the iron bridge's gray areas.




Fix by inserting the bump of the pier with the viaduct.

3-2 Guideline to assemble the overhead mast

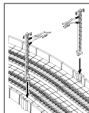

Separate them carefully from the runner parts and insert them into the viaduct holes. Refer to [Guideline to assemble the layout] for the mounting position.


4 Guideline to connect the controller

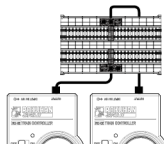

Pattern A

Both internal and external lines can be operated with their respective controllers.

 - * Train controller RC-02 x 2 pcs or RC-03 x 2 pcs or RC-02 x 1 pc and RC-03 x 1 pc.
- * You can combine them as you like.



Pattern B

Internal and external lines can be operated at the same time. (Separate operation is not possible.)

- * Train controller RC-02 x 1 pc or RC-03 x 1 pc
- * A029 Y cable x 1 pc

5 Trouble and repair

- The user is responsible for any trouble, accident, or injury caused by misuse, disassembling, or modification to this product. Rokuhan will not repair a product which has been opened, taken apart, or modified.
- Specification and appearance of our products are subject to change without prior notice.
- Contact Rokuhan customer service if you have any questions.